Timer Dimmer User Manual



CE FE KOHS

(Please read through this manual carefully before use)

This Timer dimmer Series is 4CH output, it can adjust the brightness based on the set time. Users also can insert a variety of special lighting change effect, which can be $customized\ or\ recorded\ by\ the\ DMX\ console,\ simulating\ light\ change\ in\ the\ nature\ perfectly,$ suitable for commercial lighting, plant light and aquarium light etc.

2. Specifications

Model	Constant Voltage 6A	DMX512	
Working Voltage	DC12-DC36V	DC9V(With adapter)	
Output Current	6A x 4CH	/	
Input Signal	DMX512	DMX512	
Output Signal	/	DMX512 (Four effective data channel)	
DMX Interface	XLR-3, RJ45, Terminal Block	XLR-3, RJ45, Terminal Block	
Working Temp	-20~55℃	-20~55℃	
Product Dimension	L161×W100×H30(mm)	L161×W100×H30(mm)	
Weight(G.W)	480g	460g	

3、Basic Features

- 1、With LCD display, easy operation.
- $2 \sqrt{\frac{1}{2}}$ Built-in real time clock system , and can $\,$ set $\,$ any time & any brightness.
- 3, 4 CH output, each channel can be configured and timed dimming independently.

 
- 4. 1 manual mode, 4 timing automatic modes, 12 change effects , perfectly simulate the light changes in nature
- $5\sqrt{4}$ kinds of change effect record function, you can use standard DMX512 console
- to program and record as a special effect mode.
- $\mathbf{6}_{\times}$ Quick demonstration function, users can quickly check the accuracy of the data $7\sqrt{4}$ CH output constant voltage or DMX512 signal.
- 8、Multiple DMX512 interface: XLR-3, RJ45, terminal block for convenient usage.

4、Safety warnings


1. Please don't install this controller in lightening, intense magnetic and high-voltage fields.

- $2. To \ reduce \ the \ risk \ of \ component \ damage \ and \ fire \ caused \ by \ short \ circuit, \ make \ sure \ damage \ and \ fire \ caused \ by \ short \ circuit, \ make \ sure \ damage \ damag$ correct connection 3. Always be sure to mount this unit in an area that will allow proper ventilation to ensure a
- fitting temperature. 4. Check if the voltage and power adapter suit the controller
- 5.Don't connect cables with power on, make sure a correct connection and no short circuit checked with instrument before power on.
- 6. Please don't open controller cover and operate if problems occur.
- The manual is only suitable for this model; any update is subject to change without prior notice.

5、Dimensions



 1.Button Description



Timer Dimmer Timer Dimmer

Key	Short press Function	Long press Function(2S)	
M1,M2,M3	Callout saved mode	Save the current mode	
MODE	Switch mode Back to previous	Enter special effect exit setup	
SETUP	Enter and switch setup	Enter system setup	
UP	Increase current set value	Increase current set value rapidly	
DOWN	Decrease current set value	Decrease current set value rapidly	
ОК	Confirm and enter into next set value		
2. Working mo Auto mode m	ode eans that the dimmer adjust the brightne	ess automatically at a specified	

time according to the set parameters.

Manual mode is to set the brightness of 4 channels respectively through the keys.

After setting, the brightness will remain the same until the next change.

NO.	Working mode	LCD display	Operation		
1	Auto mode 1	1. AUTO MODE1			
2	Auto mode 2	2. AUTO MODE2	Press MODE to switch ,		
3	Auto mode 3	3. AUTO MODE3	SETUP to enter setting		
4	Auto mode 4	4. AUTO MODE4			
5	Manual mode	5. MANUAL MODE			
3. Auto modes effects					

3. Auto modes effects In auto modes, each channel can be set to 8 scenes separately, and inset 8 special effects. When finish setup, the dimmer can control the led lights automatically based on the setup. Meanwhile, each mode can be inserted up to 8 effects. When the dimmer change automatically according to the set scene, and if the current time is set with special effect, it changes to the special effect priority. After exiting the special effect time, the controller will restore automatically to set the automatic changes of set scene After pressing the SETUP to enter the parameter setting, select the setting or operation you need firstly: Operation

Four channels CH1,CH2,CH3,CH4 1 Press MODE to exit setup the specific setting mode Special 2 Effects UP&DOWN to switch 60 times the spee of the demo, a total of 24 minutes Quick Demo options, OK to enter 3 concrete setting All parameters in this Load Default 4 mode to restore the default


Enther into the appropriate interface according to the setting or operation you choose:

Can set up to eight scenes, each scene has four settings: switch (the current scene is valid)Hour, Minute, Brightness Press MODE to return, SETUP to switc Scene, UP, DOWN to modify the set value,OK to switch next set value Can set up to eight scenes, each scene has six settings: switch (the current scene is valid) begin hour, minute end hour, minute and special number Press MODE to return, SETUP to switch Special Scene,UP, DOWN to modify the set value, OK to switch next set value Effects 60 times the speed of quick demo, a total time of 24 minutes, this function is used to check the scene is set, the effect setting is invalid. Quick Demo OK enter into demo , MODE Bacl Parameter setting restore to default at OK Enter, OK again to confirm When setting parameters scene, next scene time must be later than the former scene

time. Exit settings, the dimmer will automatically check if there is an error and you will be prompted which channel' s parameter is set error:

For example the scene and special effect as below

Channel	CH1		CH2		CH3		CH4	ļ	Special
Scene		0% 15% 100% 100% 20% 15% 15% 0%		0% 20% 100% 100% 20% 0% 0%		0% 0% 100% 100% 0% 0% 0%		0% 5% 100% 100% 5% 0% 0%	0:00-7:00 Moonlight 20:00-20:10 Thunderstorm

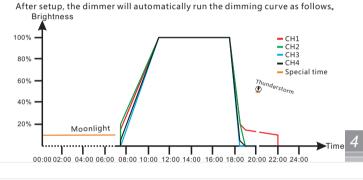

Timer Dimmer Timer Dimmer

4. Special effects

In normal working modes, long press "MODE" to enter the special effect setup mode, long press this button again to exit and back to the normal working mode. After entering the special effect setup, press "MODE" to switch the special mode, press "SETUP" to enter all the special effect settings.

NO.	Special effect descriptiont	LED display	Changing effect and setting value	Operation	
1	Night light mode	S01.NIGHT LIGHT NIGHT SETUP 00% 00% 00% 00%			
2	Day light mode	S02.DAY LIGHT DAY SETUP 100% 100% 100% 100%	Setup the respective brightness of 4 channels to adjust the static brightness	brightness of 4 channels to set value, OK to swite	UP,DOWN to modify the
3	Moon light mode	S03.MOON LIGHT MOON SETUP 10% 00% 00% 00%			next set value, MODE
4	Cloudy light mode	S04.CLOUDY LIGHT CLOUDY SETUP 50% 50% 50% 50%			
5	Sunrise mode	SUNRISE BEGIN 00% 00% 00% 00%	Setting values are divided into group,UP,DOWN	Setup to switch setting group,UP,DOWN to	
6	Sunset mode	SUNSET BEGIN 100% 100% 100% 100% 100%	two groups of fourParameter, which is the respective original brightness and final brightness of four channels	modify the set value, OK to switch next set value	
7	Thunderstorm mode	S07.THUNDERSTORM STORM SETUP ON ON ON ON	According to on/off, type, speed and the flicker or strobe of brightness, the setting value are divide	Setup to switch setting group,UP,DOWN to	
8	Lightning mode	S08.LIGHTNING LIGHTNING SETUP ON ON ON ON	into four groups, on/off, type, speed and brightness.	modify the set value, OK to switch next set value	

Recording effect (If you need 10 more special effects, you can press enter to record, if use DMX512 console to record not empty, press enter to If not, no need to record delete, press OK to enter 11 12

In normal working modes, long press "SETUP" to enter the system setting, long press the


button again to exit and back to the normal working modes. $\mbox{\ \ }_{\bullet}$

NO.	Setting	LCD display	Operation
1	System time setup	SYSTEM TIME 01/01/2015 00:00	Press SETUP to enter the setup , UP&DOWN to modify the set value, OK to switch next set value
2	Load default setup	SYSTEM TIME LOAD SEFAULT OK!	Press OK to enter , press "OK"again to confirm

(7、Conjunction Diagram) DMX512 conjunction diagram:

(DMX lamps can be directly connected or connecte to DMX decoder) Adapter ===

 
DMX decode




8. After-Sales

Constant Voltage 6A conjunction diagram :

 Timer Dimmer



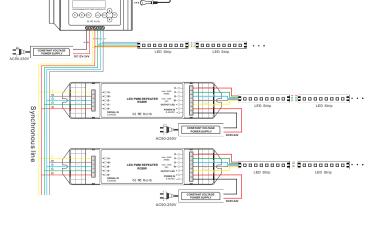

From the day you purchase our products within 3 years, if being used properly in

accordance with the instruction, and quality problems occur, we provide free repair or replacement services except the following cases: 1.Any defects caused by wrong operations. 2. Any damages caused by inappropriate power supply or abnormal voltage

- 3. Any damages caused by unauthorized removal, maintenance, modifying circuit, incorrect connections and replacing chips.
- 4. Any damages due to transportation, breaking, flooded water after the purchase. 5. Any damages caused by earthquake, fire, flood, lightning strike etc force majeure of
- natural disasters. 6. Any damages caused by negligence, inappropriate storing at high temperature and humidity environment or near harmful chemicals

7.Product has been updated.

Timer Dimmer